

EASIRAIL: WALL TO FLOOR HANDRAIL KITS 1 - 3 STEPS

Wall to floor handrail kits

Our wall to floor handrail kits are available to suit standard steps, ranging from one to three treads.

They are available in either Green or Black as standard with marine grade stainless steel connectors, providing the ideal solution where support is required at a stepped access point.

Our posts are fully galvanised and powder coated ensuring they will remain free from corrosion for many years to come and giving us the confidence to offer a 10 year warranty.

Designed for use with a high strength glue, eliminating the need for specialist tools, they are quick and easy to install. If you are in an environment where you require a more permanent fix, you can also rivet the connectors in to position. Please call us to discuss.


All items (and many more) are also available as individual components - you can fully customise your handrail solution to suit your requirements. For more details on our Easirail handrail system, please contact us.

*N.B. No floor/wall fixings are supplied with our kits owing to the multitude of surfaces the handrail may be secured to. You can purchase these from your local hardware store who will be able to advise.



Installation

- We suggest you 'dry' fix the handrail in position as illustrated below, to determine the correct fixing points whilst ensuring the handrail is at the correct angle - should a connector be difficult to insert, you may need to file off any seam inside the tube. They are designed to be a very tight fit.
- You may need to 'pack' underneath the base plate to ensure the post sits vertical.
- Rotate the post and connector as required to miss joints or to move further away or closer to an edge as required.
- Mark the fixing points, remove, then drill, and plug (where relevant).
- Firstly, secure the post with your choice of fixings*.
- Using the glue, place a generous bead inside the open edge of the post and both ends of the handrail before introducing the stainless steel connectors.
- Rotate the connectors when inserting in to the posts and handrail to ensure good coverage of the glue - we recommend that you insert the UCON first, followed by the handrail tube, and ending with the SWCON which will rest against the wall ready to secure in to the holes previously prepared.
- Leave undisturbed for 24 hours to fully cure before use.

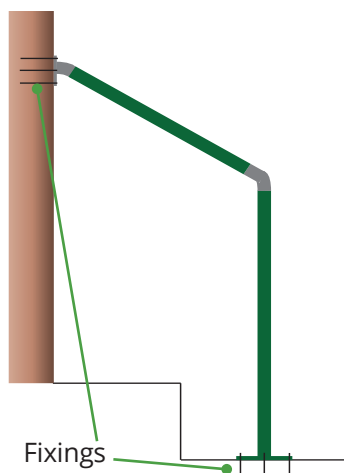

10
YEAR
WARRANTY

Easiaccess Limited

Liberty House
Federation Way
Lancaster Road, Dunston
Tyne and Wear, NE11 9JR

FREEPHONE: 0800 321 7430

E: info@easiaccess.co.uk

www.easiaccess.co.uk